# **Digital Layout**

Version 1.2.1 & 1.2 Release Notes

July 2024



# **New Release**

# **Topcon Digital Layout version 1.2.1 & 1.2 Release Notes - Introduction**

Please take time to read these Release Notes. They contain information about the following: New Features, Improvements and Defect Fixes

NOTE: It is always recommended, before upgrading your field software, user's backup their original project data; and following any update to your field software, users perform in-the-field checks to ensure data integrity

# Version 1.2.1

# **Defects**

- Fixed an issue where creating a known point on a non-default layer would cause TDL to crash.
- Fixed an issue where clicking on OneDrive or Google Drive in the file explorer without an internet connection would cause TDL to crash.
- Fixed an issue where laying out a line created between two points that were created by the Building Line setup would cause TDL to crash.
- Fixed an issue where design points with a CP prefix that are converted to known points would not appear in the map.
- Fixed an issue where the target setting will change to ATP1 if the user goes to the Settings menu within the Target Settings screen.
- Fixed an issue with certain layer lists not being scrollable.
- Fixed an issue where some angles are not undoing after selecting "Undo" within Enter Plan.
- Fixed an issue where wrong messages are displayed when toggling on different Line Snap settings.
- Fixed an issue where DWG files are only exporting in meters.
- Fixed an issue where deviations are not appearing when laying out Measured points.
- Fixed an issue where the software would display a green highlight when it is out of tolerance after selecting an offset within the Layout Line routine.
- Fixed an issue where two separate confirmations are displayed when deleting a point.

# Version 1.2

# **New Features**

# Laser layout

Users can now select any points to layout and the instrument will automatically turn to that point on the floor or ceiling with a laser projected to the point. This allows users to quickly layout without having to use a prism. This feature is only for instruments with reflectorless capabilities.

# **Grid line setup**

Users can now setup their instrument using grid lines.

# **Height transfer**

Ability to set a benchmark elevation allowing TDL to tell the difference in height between a point and the benchmark, acting similar to a rotating laser. This can be used with both a traditional prism and reflectorless.

#### Plot scale

Plot scale is re-introduced to allow users to scale pdf drawings using the scale bar of the drawing.

## Undo button for deleted linework

Users can now undo deleted linework. An Undo button will now appear when any linework made in TDL is deleted.

#### Use same setup location in a new job

Ability to re-use a setup location from one job to another within the same project.

#### Cloud storage

TDL now supports Google Drive and Microsoft OneDrive for cloud storage options.

# **Improvements**

#### **Segments**

Ability to create segments in the Create routine when creating points. Users can create segments by entering a specific length of each segment or by entering the number of segments between two points.

#### Live digital tape

A live measurement box has been added to the Digital Tape routine. This will allow users to see live measurements after the first point of the measurement has been taken.

#### Layer list during import

Ability to select the drawing layers when importing a .dwg file so users can select only the layers needed to be imported into TDL.

## Layout list improvements

Users can now select any specific points on their active layout list to start laying out as well as from the plan view.

## Layout next line without resetting

Users can now select the next line to be laid out within the Layout Lines routine without having to back out of the routine.

## Instrument height in Setup Anywhere

Instrument height can now be added within the Setup Anywhere routine.

#### Real-time elevation

Real-time elevation can now be displayed on the plan view to show the user's current elevation during layout in real time.

## Layout point list saved between sessions

Layout point list will now be saved when restarting TDL so users can continue their progress without having to re-select points for their point list.

#### Creation tool menu

Redesigned creation tool menu to be more intuitive and provide better user experience.

#### Layer assignment for lines

When creating new line work, users can now assign new lines to specific layers.

#### Measured points layer assignment

Layers can now be assigned to measured points within the Measure routine.

#### Point in center of object

TDL can now create points within the center of objects such as: triangles, circles, squares, etc.

#### Create mid points by selecting two points

Users can now create mid points by selecting two points within the Create routine. Previously, one could only create a midpoint by selecting a line.

#### Delete segment in Enter Plan

Users can now delete a segment of continuous linework within the Enter Plan routine.

# **Deviation columns in point list**

The deviation columns can now be toggled on/off within the point list.

#### Improved zoom and rotation

Improved zoom, pan and rotation within plan view for better experience with touch screens.

# **Results box for Calculate routine**

Results box from the Calculate routine is redesigned to show users data in an easy-to-understand fashion. Additional data is also displayed on the plan view to provide users with more information.

# Export linework in .dwg/.dxf

Users are now able to export TDL created linework in .dwg and .dxf file format.

## **Group points conversion**

Users can now convert multiple points into control points simultaneously within the points list.

# Point type column in point list

A new column is added in point list to show the point type for easier referencing.

# Point conversion within plan view

Points can now be converted from plan view, not just from the point list.

#### Double click un-select

Any selected objects can now be unselected by double clicking the plan view screen.

# **Topcon Enterprise within file explorer**

Topcon Enterprise has been added to the file explorer. This will allow users to quickly import/export files directly to and from Topcon Enterprise.

## Millimeter support

Millimeter is now a supported unit in TDL.

# Mini 360 prism support

The new Topcon mini 360 prism is now supported by TDL.

#### **Date format**

Users can select the date format desired in TDL generated reports for different countries/regions.

#### Point naming

The default point name for first point is now "1" instead of "1000".

## Default job name

The default job name when creating a new job is now "Job1".

# **Defects**

- Fixed an issue where projects would disappear after restarting TDL.
- Fixed an exporting issue where all points are exported as meters even if the export setting is set to a different unit.
- Fixed an issue where linework and points are appearing in different jobs when switching jobs.
- Fixed an issue where certain text fields only pull up the numeric keyboard on Android.
- Fixed an issue with LN-150 not connecting.
- Fixed an issue where projects would disappear after updating TDL.
- Fixed an issue with the zoom scale inconsistency within Scale and rotate.
- Fixed an issue where the "Horizontal search area" and "Vertical search area" within the Settings menu are not appearing.
- Fixed an issue where the solid circle of a point that has been laid out would show up as a hollow circle after adding elevation.
- Fixed an issue where an occupation point is only selectable within the map view.